
ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0196 / P0228

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.


2. READ AND SAVE THESE INSTRUCTIONS.

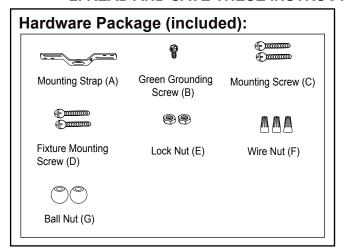

Installation Steps

Turn off the power at fuse or circuit box.

- 1. Thread fixture mounting screws through mounting strap, and then secure them with two lock nuts. Adjust the length of fixture mounting screws if necessary.
- Attach mounting strap to outlet box using two mounting screws.
- 3. Rod Connections:
 - a. Thread the fixture wire from the fixture through the lower rod, and then secure the lower rod onto fixture using the threaded pipe.
 - b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.

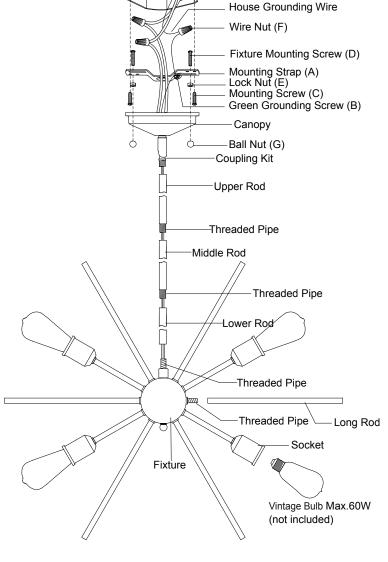

Outlet Box

Note: Length adjustable from 30-1/2" to 75-1/2". Use fewer rods if shorter length is desired.


- 4. Thread the fixture wire through coupling kit, canopy, and then secure the rod assembly to the coupling kit.
- 5. Screw 12 long rods to the other threaded pipes of fixture.
- 6. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
- 7. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - ---Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - ---Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - ---Attach the fixture grounding wire to the mounting strap with the green grounding screw, and then connect it to the house grounding wire with a wire nut.

Carefully put the wires back into the outlet box.





- 8. Attach the canopy to the mounting strap, and then secure it with two ball nuts.
- 9. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

Turn on the power at fuse or circuit box.

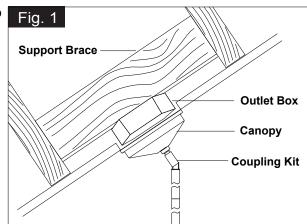

The following parts are available for re-order if damaged or missing.

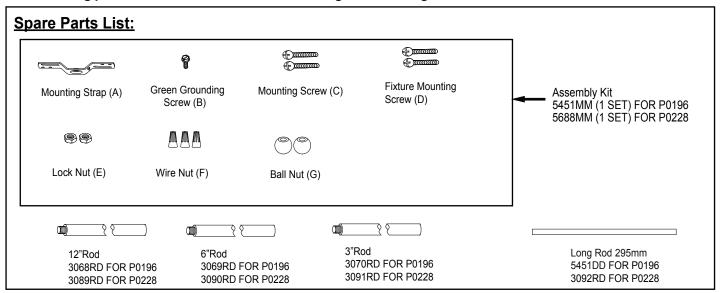

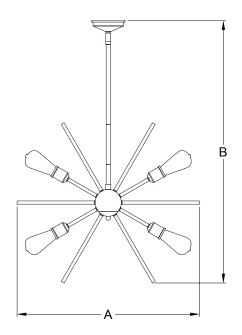

A: 27-1/2"

B: 30-1/2"~75-1/2"

